

HUB/HUB&DRUM CROSS-REFERENCE

<u>PART #</u>	<u>DESCRIPTION</u>	<u>PART #</u>	<u>DESCRIPTION</u>	BEARING PROTECTOR REQUIRED
250-015651	HUB 5H #BT151A 1350# (747)	-	NO CROSS REFERENCE	PART # SEE NOTE 3
250-019101	HUB&DRUM 8.5" 5H #15405 W/STUDS (456)	-	NO CROSS REFERENCE	SEE NOTE 3
250-020888	HUB 6H (1206) (747)	250-029196	HUB 6H 5500# HRM (OIL)	250-034413 **
250-020889	HUB&DRUM 12" 6H (2 STEP BORE) (747)	250-029200	HUB&DRUM 12" 6H HRM 5500# (OIL)	250-034413 **
250-027017	HUB&DRUM 7" 5H W/STUDS (747)	250-029197	HUB&DRUM 7" 5H OIL (ECN#456)	250-034412 **
250-027055	HUB 5H BT150 (747)	250-029193	HUB 5H BT150 OIL (obs)	250-034412 **
250-027908	HUB&DRUM 12" 6H-HD W/STUDS (747)	-	NO CROSS REFERENCE	SEE NOTE 3
250-031432	HUB 5H 1350# BT150A (GREASE) (747)	250-029194	HUB 5H 1350# BT150A (OIL)	250-034412 **
250-033747	HUB 5H H1000 W/ 2" STUDS (OIL) (747)	250-029195	HUB 5H 1850# UHI (OIL)	NOT REQUIRED
250-033861	HUB 6H W/ 2" STUDS (OIL) (713)	250-029196	HUB 6H 5500# HRM (OIL)	NOT REQUIRED
250-033955	HUB 6H W/ 2" STUDS (GREASE) (713)	250-031797	HUB 6H 5500# HRM (GREASE) (753)	SEE NOTE1
250-034054	HUB 5H H1000 W/ 2" STUDS (GREASE) (713)	250-031438	HUB 5H 1850# UHI (GREASE)	SEE NOTE2
250-041330	HUB&DRUM 10" 5H UHI 3700# (GREASE) (713)	250-029199	HUB&DRUM 10" 5H UHI 3700# (OIL)	250-034412 **
250-031797	HUB 6H 5500# HRM (GREASE) (753)	250-029196	HUB 6H 5500# HRM (OIL)	250-034413 **

Notes:

- 1) 250-031797 HUBS USE 250-013275 BEARING PROTECTOR FOR UFP HUBS AND 250-027643 BEARING PROTECTOR FOR RELIABLE HUBS. UFP HUBS WERE NOT USED AS PRODUCTION ITEMS, ONLY REPLACEMENT PARTS. REPLACEMENT HUBS FOR AIRTIGHT APPLICATIONS WILL REQUIRED HUB 250-034147 AND 250-028360 OUTER BEARING.
 - 2) HUB REQUIRES DRIVE IN CAPS FOR AIRTIGHT APPLICATIONS.
 - 3) HUB DOES NOT HAVE A SCREW IN BEARING PROTECTOR COUNTERPART.
- ** APPLY RTV TO SCREW IN BEARING PROTECTOR THREADS PRIOR TO INSTALLATION.