


## CHANNEL GLIDE INSTALLATION


- 1) Measure length of bunk being fitted with channel glides. Using sheet one, determine quantity required. Arrange channel glides and maintain proper spacing per its instruction's.
- 2) Clamp channel glides to bunk, making sure that they have compressed carpet and eliminated any gap that might have been present.
- 3) Attach channel glides using 6 (#8x1 1/4" PH TAPPING SCREW) per channel glide. DO NOT OVERTIGHTEN SCREWS as they will pull through composite material.

★ INDICATES CHANGE ON EFFECTIVE DATE

DESCRIPTION: CHANNEL GLIDE COVER		PART #: CHANNEL GLIDE BUNK COVER	
		EFFECTIVE DATE: 09-27-21	ECN: NONE

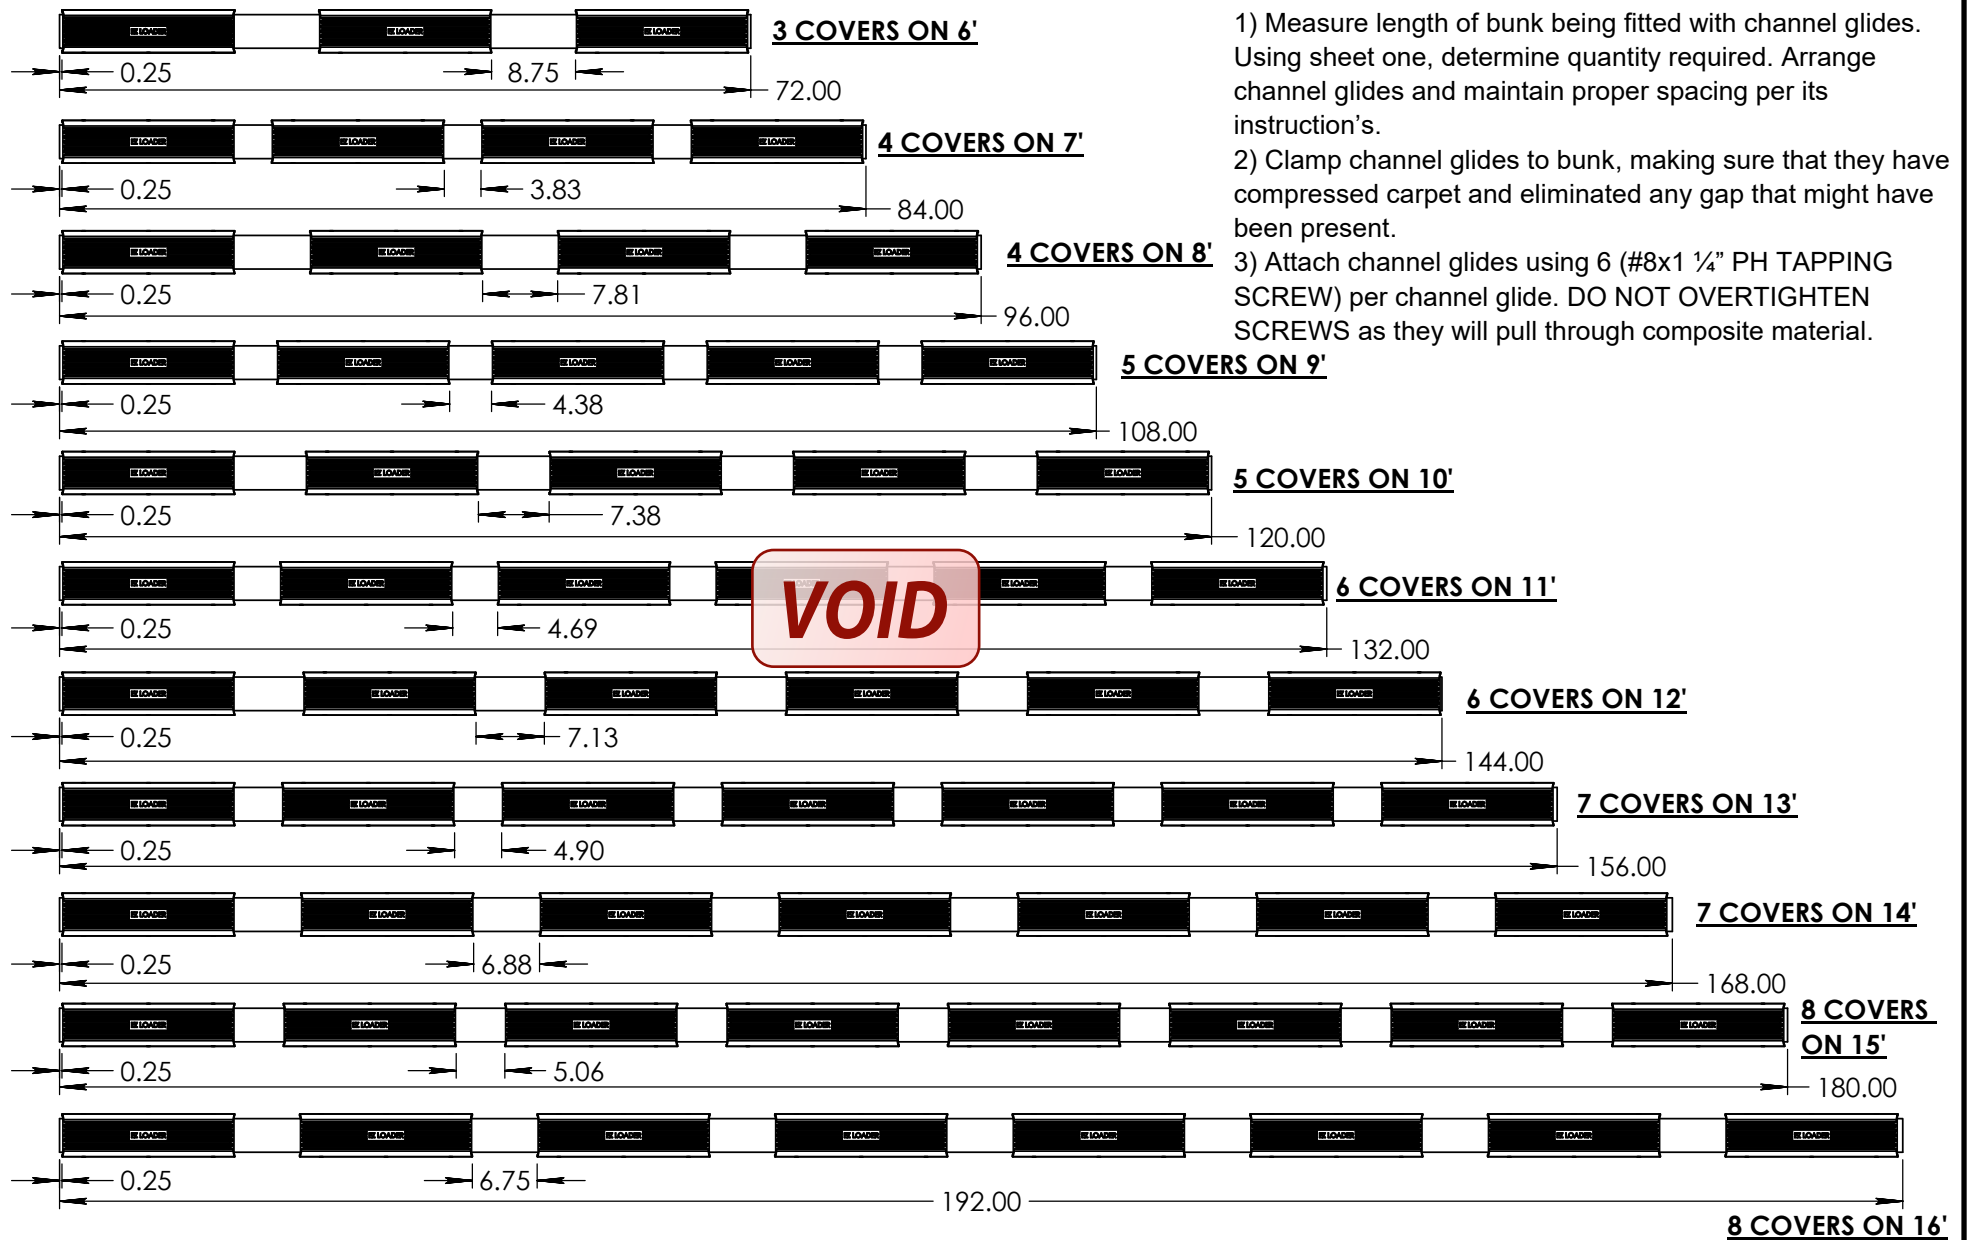

★ INDICATES CHANGE ON EFFECTIVE DATE

DESCRIPTION: CHANNEL GLIDE COVER		PART #: CHANNEL GLIDE BUNK COVER	
	EFFECTIVE DATE: 10-03-18	ECN: 949	
	CONFIDENTIAL INFORMATION		